

# Barbie™

---

Petal™ Sound System for iPod®



**OWNER'S MANUAL**

**BAR710**

Barbie and associated trademarks and trade dress are owned by, and used under license from, Mattel, Inc. ©2007 Mattel, Inc. All Rights Reserved.

# SAFETY INSTRUCTIONS



## CAUTION

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



## DANGEROUS VOLTAGE:

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



## ATTENTION:

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## CAUTION—ELECTRICALLY OPERATED PRODUCT:

Not recommended for children under 5 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**

**The Caution Marking is located at the bottom enclosure of the apparatus.**

iPod is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

# SAFETY INSTRUCTIONS

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

## 1. READ INSTRUCTIONS

All the safety and operating instructions should be read before the product is operated.

## 2. RETAIN INSTRUCTIONS

The safety and operating instructions should be retained for future reference.

## 3. HEED WARNINGS

All warnings on the product and in the operating instructions should be adhered to.

## 4. FOLLOW INSTRUCTIONS

All operating and use instructions should be followed.

## 5. CLEANING

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.

## 6. ATTACHMENTS

Do not use attachments not recommended by the product's manufacturer as they may cause hazards.

## 7. WATER AND MOISTURE

Do not use this product near water—for example: near a bathtub, washbowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool.

## 8. ACCESSORIES

Do not place this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury and serious damage to the product. Use only with a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

- 8A. An appliance and cart combination should be moved with care. Quick stops, excessive force and uneven surfaces may cause the appliance and cart combination to overturn.

PORTABLE CART WARNING  
(symbol provided by RETAC)



## 9. VENTILATION

Slots and openings in the cabinet and in the

back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

## 10. POWER SOURCES

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

## 11. GROUNDING OR POLARIZATION

This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

## 12. POWER-CORD PROTECTION

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

## 13. LIGHTNING

To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

## 14. POWER LINES

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or

# SAFETY INSTRUCTIONS

where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

## 15. OVERLOADING

 
Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

## 16. OBJECT AND LIQUID ENTRY

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

## 17. OUTDOOR ANTENNA GROUNDING

If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electric Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna discharge product, connection to grounding electrodes and requirements for grounding electrodes.

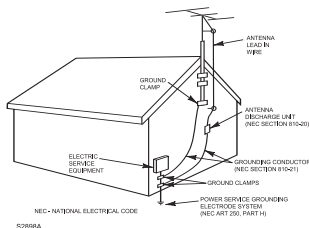

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE

## 18. SERVICING

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

## 19. REPLACEMENT PARTS

When replacement parts are required, be

sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

## 20. SAFETY CHECK

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

## 21. WALL OR CEILING MOUNTING

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

## 22. DAMAGE REQUIRING SERVICE

Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or the cabinet has been damaged.
- When the product exhibits a distinct change in performance—this indicates a need for service.

## 23. HEAT

The product should be situated away from heat sources such as radiators, heat registers, stoves or other products (including amplifiers) that produce heat.

## 24. NOTE TO CATV SYSTEM INSTALLER

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

# SAFETY INSTRUCTIONS

**FCC WARNING:**

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

**FCC INFORMATION:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Dear Customer:

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

### To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

### Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

### We Want You Listening For A Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise. This list of sound levels is included for your protection.

#### Decibel

<u>Level</u>	<u>Example</u>
30	Quiet library, soft whispers
40	Living room, refrigerator, bedroom away from traffic
50	Light traffic, normal conversation, quiet office
60	Air conditioner at 20 feet, sewing machine
70	Vacuum cleaner, hair dryer, noisy restaurant
80	Average city traffic, garbage disposals, alarm clock at two feet

### THE FOLLOWING NOISES CAN BE DANGEROUS UNDER CONSTANT EXPOSURE:

90	Subway, motorcycle, truck traffic, lawn mower
100	Garbage truck, chain saw, pneumatic drill
120	Rock band concert in front of speakers, thunderclap
140	Gunshot blast, jet engine
180	Rocket launching pad



Information courtesy of the Deafness Research Foundation.

Emerson Radio Corp. has produced this audio product under license from Mattel. We have taken great care to make sure your unit was in perfect working order when it left our factory.

It has been designed to give you many years of enjoyment and trouble-free operation. Read this manual before operating this unit to become familiar with its features. In the event you require technical assistance, please contact the Emerson Radio Customer Service hotline at 1-800-898-9020. Retain this manual for future reference.



## **WARNING**

**Choking Hazard—Small Parts and Packaging Materials.** Not for children under 5 years.

- All materials for fastening or packing purposes are not part of the unit and should be discarded for children's safety.
- Please keep all information for future reference.
- This is not a toy.

 
### **NOTES:**

- Please avoid using this unit in places of high temperature or humidity over prolonged periods of time as damage may occur.
- Exposure to direct sunlight in places such as car interiors may cause the unit to become warped and/or lead to malfunctioning.
- Avoid using or storing this unit in dusty or sandy locations.

### **PROTECT YOUR FURNITURE**

This model is equipped with non-skid rubber "feet" to prevent the product from moving when you operate the controls. These "feet" are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives or cleaning sprays may cause the rubber "feet" to soften and leave marks or a rubber residue on your furniture. To prevent any damage to your furniture, we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber "feet" before you place the product on fine wooden furniture.

## LOCATION OF CONTROLS

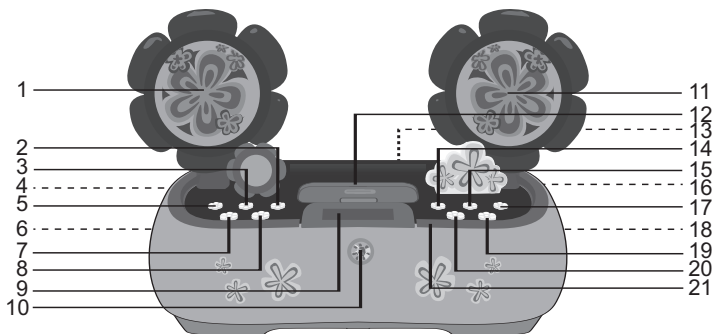

- |   |   |
|---|---|
| 1. Left Speaker   | 17. MINUTE/Skip/Search ⏭ Button                                   |
| 2. ALARM SET Button   | 18. PHONE (Headphones), AUX IN and VIDEO OUT Jacks (Rear of Unit) |
| 3. ALARM ON/OFF Button  | 19. PLAY/PAUSE Button   |
| 4. AC Cord (Rear of Unit)   | 20. iPod/AUX/AM/FM Button   |
| 5. SLEEP Button   | 21. Light Ring  |
| 6. VOLUME Control (Side of Unit)                                      |   |
| 7. STANDBY ON Button  |   |
| 8. SNOOZE Button  |   |
| 9. Display  |   |
| 10. GEMSTONE FUN Button   |   |
| 11. Right Speaker   |   |
| 12. iPod Compartment with Connector & Interchangeable Universal Docks |   |
| 13. Battery Compartment (Bottom of Unit)                              |   |
| 14. TIME SET Button   |   |
| 15. HOUR/Skip/Search ⏮ Button   |   |
| 16. TUNING Control (Side of Unit)                                     |   |



## LOCATION OF CONTROLS (CONTINUED)

### LCD Display



 
1. PM Indicator
2. AM/FM Band Indicators
3. Time Display
4. Frequency Display
5. Alarm Indicator
6. SLEEP/STEREO/AUX/iPod/Radio/Buzz Indicators

# POWER SOURCE

## AC CONNECTION

Use the AC polarized line cord for operation on AC power. Insert the AC plug into any convenient 120V 60Hz household outlet.


**NOTE:** The AC plug supplied with the unit is polarized to help minimize the possibility of electric shock. If the AC plug does not fit into a nonpolarized AC outlet, do not file or cut the wide blade. It is the user's responsibility to have an electrician replace the obsolete outlet.

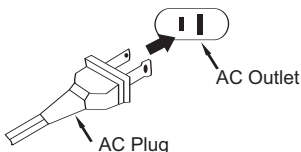

## BATTERY INSTALLATION


Two (2) "AAA" size batteries can also be used to power and/or to provide a backup for the clock and alarm time for this unit as follows:

 1. Open the battery door by removing the screw and then sliding the battery door off in the direction of the "OPEN" arrow.
2. Insert two (2) "AAA" batteries as shown. Alkaline batteries are recommended for the longest playing time.
3. Replace the battery door and screw back on the compartment.

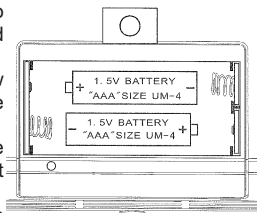

### NOTE:

 - The batteries are used to back-up the clock and alarm times when the AC adapter is disconnected or there is a power failure.



## BATTERY PRECAUTIONS

- \* Replacement of batteries must be done by an adult.
- \* Do not mix old and new batteries.
- \* Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- \* The supply terminals are not to be short-circuited.
- \* Non-rechargeable batteries are not to be recharged.
- \* Exhausted batteries are to be removed.
- \* Only batteries of the equivalent type are to be used.
- \* Batteries are to be inserted with the correct polarity.
- \* Dispose of batteries properly.
- \* Do not dispose of batteries in fire; batteries may explode or leak.

## OPTIONAL CONNECTIONS

### PHONE (Headphones) JACK

For private listening, plug headphones into this jack. The speakers will be disconnected when a plug is inserted into this jack.

### AUX IN JACK

Insert one end of the audio cable (included) into the LINE OUT jack on your external audio unit and the other end into the AUX IN jack on the rear of this unit.

To listen to the external audio unit, turn this unit on using the STANDBY ON button. Turn on the external unit as well. Then, select "AUX" by repeatedly pressing the iPod/AUX/AM/FM button; "AUX" will appear in the display. The external audio unit's output sound will be heard through this unit's speakers. If you wish to listen to the iPod in the iPod compartment, select "iPod" by repeatedly pressing the iPod/AUX/AM/FM button; "iPod" will appear in the display.

 
### VIDEO OUT JACK

If you are using an iPod with video (5th generation) or iPod photo, you can connect this unit to an external TV with the video cable (included). You will then be able to view the photos (in Slideshow mode)/videos from the iPod on your external TV.


#### NOTES:

- Set the TV's TV/VIDEO button or switch to the VIDEO setting.
- When connecting this unit, refer to the owner's manual of the TV, as well as this manual.
- When connecting this unit to the TV, make sure the power is off and both units are unplugged before making any connections.
- Make sure to go into the Settings menu of your iPod and set the TV Out setting to ON and set the TV signal to NTSC; otherwise, you may not be able to view the photos (in Slideshow mode)/videos on your external TV.


## INSERTING AN iPod

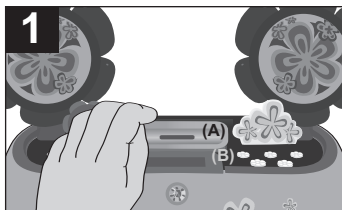

 
1  
Locate the correct Universal Dock to use as shown on page 21. Insert the Universal Dock (A) into the iPod compartment (B) (as shown), making sure the tabs are facing front, and slip the tabs into place. Press the rear side of the Universal Dock until it is positioned inside the iPod compartment.

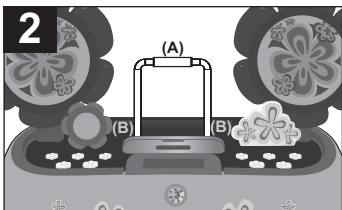

 2  
Insert the iPod Support Bracket (A) into the two holes behind the iPod Compartment (B) (as shown).

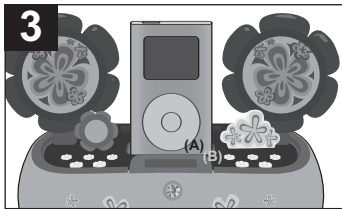

 3  
Slide the iPod (A) into the Universal Dock (B) (as shown). Gently push down so the connector on the iPod slides onto the connector on this unit.

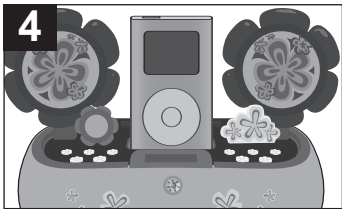


4  
The iPod will charge as long as this unit is connected via the AC cord.  
Please see the next page for instructions on using an iPod with this unit.

### NOTES:

 - For better AM radio reception, the iPod will not charge while in AM radio mode.
- To remove the Universal Dock, insert your finger (or other object) into the gap in the Universal Dock, then gently pull the Universal Dock out to remove it.

## USING AN iPod WITH THIS UNIT

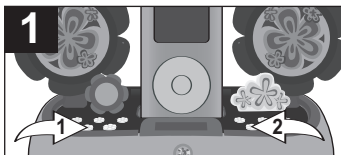

With an iPod connected (see previous page), if this unit is not already on, turn this unit on by pressing the STANDBY ON button ❶. If you are not already in iPod mode, select "iPod" by repeatedly pressing the iPod/AUX/AM/FM button ❷; "iPod" will appear in the display.



You can operate the iPod using its own controls, as per its owner's manual, or you can use the controls on the main unit to operate the iPod.



### To play/pause the iPod:

Press the PLAY/PAUSE button to start playback on your iPod. Press again to pause playback and press yet again to resume playback.



 
**To skip forward or backward on the iPod:** Press the HOUR/Skip/Search ⏮ ❶ or MINUTE/Skip/Search ⏭ ❷ button to skip to the beginning of the current track/previous or next track.

**To search forward or backward on the iPod:** Press and hold the HOUR/Skip/Search ⏮ ❶ or MINUTE/Skip/Search ⏭ ❷ button to search within the currently-playing track.

### NOTES:

- If an iPod is inserted while this unit is already on and in iPod mode, iPod playback mode will begin automatically.
- See the next page for how to adjust the volume.
- To turn this unit off, press the STANDBY ON button.

### ADJUSTING THE VOLUME

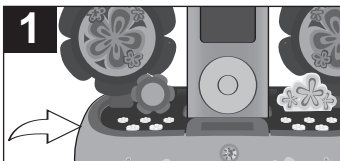


**To adjust the volume:**


Rotate the VOLUME control as desired to increase and/or decrease the volume.

## OPERATION (CONTINUED)
 
### USING THE RADIO

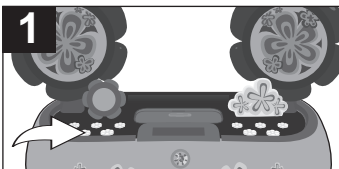

 Turn this unit on by pressing the STANDBY ON button.

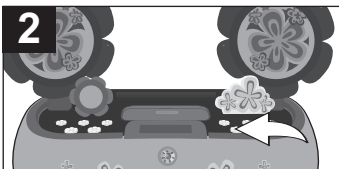

If you are not already in AM or FM mode, select "AM" or "FM" by repeatedly pressing the iPod/AUX/AM/FM button; "AM" or "FM" and the frequency will appear in the display.



Rotate the TUNING control to manually advance the frequency in the display up or down until the desired frequency appears.

**NOTE:** When a station is tuned, after approx. five seconds, the radio frequency will disappear and the actual time will reappear in the display. If you rotate the TUNING control, the radio frequency will appear in the display again.

#### NOTES:

- See the previous page for how to adjust the volume.
- To turn this unit off, press the STANDBY ON button.

 
#### ANTENNAS

**FM:** The FM antenna is built into the AC cord. You may have to extend and vary the direction of the AC cord until you find the position that provides the best reception.


**AM:** The AM bar antenna is located inside the cabinet of the main unit. You may need to change the position of the main unit until you find the position that provides the best reception of your favorite AM stations.

## OPERATION (CONTINUED)


### TO SET OR RESET THE ACTUAL TIME

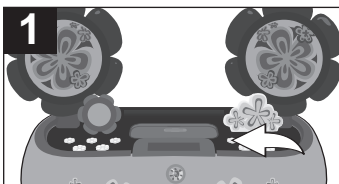

 With the power off, press the **TIME SET** button; the time will blink.

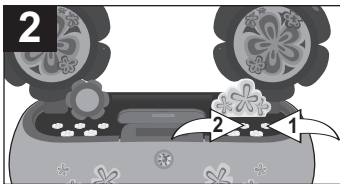

 Within 10 seconds, press the **MINUTE/Skip/Search** button ➡ to set the present minute and the **HOUR/Skip/Search** button ⬅ to set the present hour. Make sure to set the correct **AM/PM** setting.

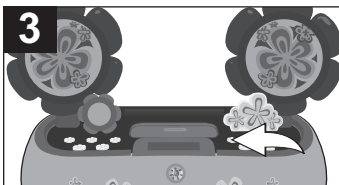

Press the **TIME SET** button (or wait approx. 10 seconds) and the time will be set.




## OPERATION (CONTINUED)

 
### TO SET OR RESET THE ALARM TIME




With the power off, press the ALARM SET button; the Alarm time will blink in the display.

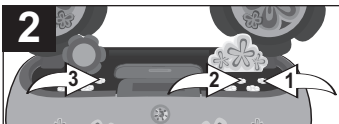

 Within 10 seconds, press the MINUTE/Skip/Search **1** button to set the alarm minute and the HOUR/Skip/Search **2** button to set the alarm hour. Make sure to set the correct AM/PM setting. Press the ALARM SET button **3** again.

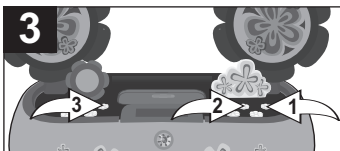

 Within 10 seconds, press the MINUTE/Skip/Search **1** button and/or HOUR/Skip/Search **2** button to set the alarm mode (iPod, Buzz[er] or Radio). Press the ALARM SET button **3** again.

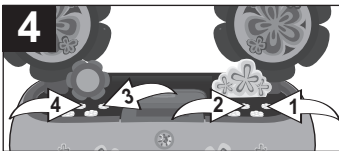


**If set to Radio**, within 10 seconds, set the band (AM or FM) using the MINUTE/Skip/Search **1** button and/or HOUR/Skip/Search **2** button, followed by pressing the ALARM SET button **3** again (or waiting approx. 5 seconds). (When the alarm time is reached, the unit will turn on the band (AM or FM) that you selected and the frequency that you had selected before turning the unit off.)

Repeatedly press the ALARM ON/OFF button **4** to turn the alarm on or off.

CONTINUED ON THE NEXT PAGE

 5

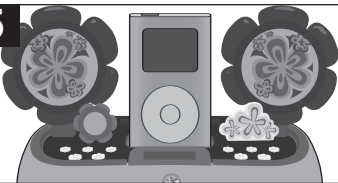

**If set to iPod**, insert the iPod as shown on page 11. Select your desired track and then make sure both your iPod and this unit are turned off. When the alarm time is reached, this unit will start playback on the track that you selected.

### NOTES:

- If set to iPod but an iPod is not connected, the unit will automatically switch to wake to Buzzer.
- Make sure to set the desired volume as shown on page 13.
- **TO SHUT OFF THE ALARM**, see TO SHUT THE ALARM OFF section on the next page.

## OPERATION (CONTINUED)

### TO SHUT THE ALARM OFF

 


To leave the alarm set for the next day, press the STANDBY ON button ❶ or ALARM ON/OFF button ❷ and the alarm will turn off but be set for the next day.



To NOT set the alarm for the next day, press the ALARM ON/OFF button again to select alarm off (no indicator in the display).

### SNOOZE




While the alarm is sounding, press the SNOOZE button. The alarm will turn back on automatically nine minutes later until the SNOOZE function is cancelled.

#### NOTES:

 - You can repeat the SNOOZE function for up to 60 minutes.
- To cancel the SNOOZE function (the alarm will not turn back on), press the ALARM ON/OFF button.

### SLEEP

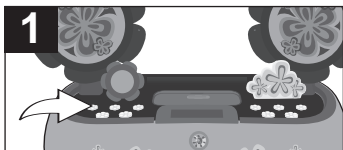

While the unit is on, press the SLEEP button; "SLEEP" will appear and "120" will blink in the display which indicates the SLEEP feature is on and set for 120 minutes (the unit will turn off automatically after 120 minutes).

To set a shorter SLEEP time, press the SLEEP button again within five seconds to select 90 minutes; "90" will blink in the display. Repeat to select 60, 30, 20, 10 or 5 minutes. (If you press the SLEEP button again while "05" is blinking in the display, the unit will turn off immediately.)

To view the remaining SLEEP time, press the SLEEP button once.


## OPERATION (CONTINUED)



 Barbie™ has a surprise just for you! Just follow the instructions below and see what you can do with your GEMSTONE FUN button!




### Step 1

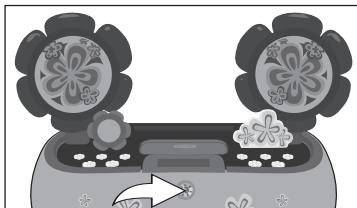

Press the GEMSTONE FUN button on your iPod sound system.



### Step 2

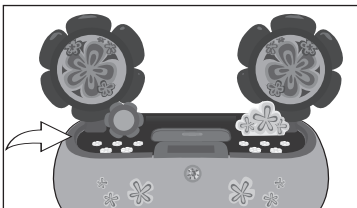 

**SURPRISE!** The pink light ring around your iPod sound system will light up!




**NOTE:**

   Press the GEMSTONE FUN button again to turn the light ring off.

## OPERATION (CONTINUED)

### iPod UNIVERSAL DOCKS

Locate your iPod in the chart below and select the respective Universal Dock (the Universal Dock No. is engraved at the front of the Universal Docks as shown on the next page) to match with your iPod. Insert the corresponding Universal Dock and your iPod into the unit as described on page 11.

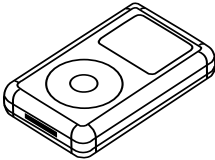iPod	Type	Memory	Univ. Dock No.
	iPod mini	4 to 6GB	5, "iPod mini"
	Fourth Generation iPod	20GB/ U2 Special Edition 20GB	3, "3G iPod (10/15GB) 4G iPod (20GB) iPod photo (20/30GB)"
		40GB	2, "3G iPod (30/40GB) 4G iPod (40GB)"
	iPod photo/ iPod with color display	20GB, 30GB, U2 Special Edition	3, "3G iPod (10/15GB) 4G iPod (20GB) iPod photo (20/30GB)"
		40 to 60GB	4, "iPod photo (40GB) iPod photo (60GB)"


**PLEASE SEE THE NEXT PAGE FOR IMPORTANT NOTES  
AND THE LOCATION OF THE UNIV. DOCK NO.**

## OPERATION (CONTINUED)
 
### NOTES:

- The Third Generation iPod 10-15GB uses the same dock as the Fourth Generation iPod 20GB. Also, the Third Generation iPod 30-40GB uses the same dock as the Fourth Generation iPod 40GB.
- For the iPod nano and for the iPod video (Fifth Generation), please use the universal docks included with your iPod.
- Also included with this unit is a dock for use with the Barbie™ Petal MP3 player™; it is marked on the bottom as “MP3 Player, 6”. There is also a “dust cover” (a dock with no opening for an iPod) included with this unit; it is marked on the bottom as “1” and on the front as “iPod cover”. Please insert the “dust cover” into the iPod compartment if you will not be using an iPod with this unit for an extended amount of time.

**IMPORTANT!** The Universal Dock No. is engraved at the front of the docks. Please refer to the illustration below for the location of the Universal Dock No.



## TROUBLESHOOTING GUIDE

If you experience a problem with this unit, check the chart below before calling for service.

SYMPTOM	CAUSE	SOLUTION
No sound.	Volume is set to minimum.	Increase volume.
AM or FM, no sound.	Power is not on.	Press the STANDBY ON button, then iPod/AUX/AM/FM button to select AM or FM.
	Volume is set to minimum.	Increase volume.
AM/FM, poor sound.	Station is not tuned properly.	Retune the AM or FM broadcast station.
	FM: AC cord is not extended.	Extend AC cord.
	AM: Unit is not positioned correctly.	Rotate unit until best reception is obtained.
iPod mode, no sound.	Incorrectly connected.	Check the connection.
	Not in iPod mode.	Press iPod/AUX/AM/FM button.
Time reset to "12:00".	Batteries connected improperly, not connected or dead.	Check the batteries.
	Clock not set.	Set the clock, see page 15.
Alarm does not turn on.	Alarm is not activated or set properly.	Set and activate alarm as described on page 16.
	Clock is not set.	Set the clock, see page 15.



**EMERSON RADIO CORP.**  
**LIMITED WARRANTY (Valid in the United States)**

Emerson Radio Corp. warrants manufacturing defects in original material, including original parts and workmanship, under normal use and conditions, for a period of ninety (90) days from the date of original purchase in the U.S. With your dated proof of purchase, we will provide repair service at no charge for labor and parts at an authorized Depot Repair Facility, or replace the product in our discretion. For repair or replacement, pack your unit in a padded box, enclose your check or money order payable to Emerson Radio Corp. in the amount of \$9.00 (not required by California residents) to cover shipping and handling costs, and enclose a copy of your proof of purchase. Send your unit to:

Emerson Radio Corp.  
5101 Statesman Drive  
Irving, TX 75063

This warranty does not cover damage from negligence, misuse, abuse, accident, failure to follow operating instructions, commercial use, rental, repairs by an unauthorized facility, or products purchased, used, serviced or damaged outside of the United States.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

AU898M

The serial number of your system is located on a label on the bottom cabinet. Please take a moment now to locate the serial number and write the number in the space provided below. You may be asked to provide this number when calling for product service.

**Model Number:**            **BAR710**  
**Serial Number:**            \_\_\_\_\_



**Emerson®**

SERVICE

TO FIND THE LOCATION AND PHONE  
NUMBER OF YOUR NEAREST SERVICE  
CENTER PERMITTED TO PERFORM  
WARRANTY...

CALL TOLL FREE: 1-800-695-0098

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE  
PLEASE CALL:  
1-800-898-9020

FOR CUSTOMER SERVICE, PLEASE WRITE TO:  
Emerson Radio Corp.,  
Consumer Affairs Dept.,  
5101 Statesman Drive,  
Irving, TX 75063.

**EMERSON® WARRANTY (Valid in Canada)**  
Consumer Electronics, Home Appliances and Home Office Products

**Thank you for choosing EMERSON®!**

SYNNEX Canada Limited gives the following express warranty to the original consumer purchaser or gift recipient for this EMERSON product, when shipped in its original container and sold or distributed in Canada by SYNNEX Canada Limited or by an Authorized EMERSON Dealer:

SYNNEX Canada Limited warrants that this product is free, under normal use and maintenance, from any defects in material and workmanship. If any such defects should be found in this product within the applicable warranty period, SYNNEX Canada Limited shall, at its option, repair or replace the product as specified herein. Replacement parts furnished in connection with this warranty shall be warranted for a period equal to the unexpired portion of the original equipment warranty.

This warranty shall not apply to:

- a. Any defects caused or repairs required as a result of abusive operation, negligence, accident, improper installation or inappropriate use as outlined in the owner's manual.
- b. Any EMERSON product tampered with, modified, adjusted or repaired by any party other than SYNNEX Canada Limited or EMERSON's Authorized Service Centres.
- c. Damage caused or repairs required as a result of the use with items not specified or approved by SYNNEX Canada Limited, including but not limited to head cleaning tapes and chemical cleaning agents.
- d. Any replacement of accessories, glassware, consumable or peripheral items required through normal use of the product including but not limited to earphones, remote controls, AC adapters, batteries, temperature probe, stylus, trays, filters, cables, paper, cabinet, cabinet parts, knobs, buttons, baskets, stands, shelves, cookware and cooking utensils.
- e. Any cosmetic damage to the surface or exterior that has been defaced or caused by normal wear and tear.
- f. Any damage caused by external or environmental conditions, including but not limited to transmission line/power line voltage or liquid spillage.
- g. Any product received without appropriate model, serial number and CSA /cUL /cULus /cETL /cETLus markings.
- h. Any products used for rental or commercial purposes.
- i. Any installation, setup and/or programming charges.

Should this EMERSON product fail to operate during the warranty period, warranty service may be obtained upon delivery of the EMERSON product together with proof of purchase and a copy of this LIMITED WARRANTY statement to an Authorized EMERSON Service Centre. This warranty constitutes the entire express warranty granted by SYNNEX Canada Limited and no other dealer, service centre or their agent or employee is authorized to extend, enlarge or transfer this warranty on behalf of SYNNEX Canada Limited. To the extent the law permits, SYNNEX Canada Limited disclaims any and all liability for direct or indirect damages or losses or for any incidental, special or consequential damages or loss of profits resulting from a defect in material or workmanship relating to the product, including damages for the loss of time or use of this EMERSON product or the loss of information. The purchaser will be responsible for any removal, reinstallation, transportation and insurance costs incurred. Correction of defects, in the manner and period of time described herein, constitute complete fulfillment of all obligations and responsibilities of SYNNEX Canada Limited to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise.

**CARRY-IN PARTS & LABOUR WARRANTY PERIODS:**

- Audio Products: 1 Year (Remote Control, if applicable – 90 Days)
- Home Appliances: 1 Year
  - Microwave Magnetron parts only additional 3 Years
  - Refrigerator / Freezer Compressor parts only, additional 4 years
- Home Office Products: 1 Year

To obtain the name and address of the nearest Authorized EMERSON Service Centre or for more information on this warranty

- visit [www.emersonelectronics.ca](http://www.emersonelectronics.ca)
- mail your inquiry to: SYNNEX Canada Limited, EMERSON Customer Service  
200 Ronson Drive, Toronto, ON M9W 5Z9; or
- call toll free 1-800-663-5954, Monday to Friday 9:00am – 5:00pm Eastern Standard Time.

08.2007

